

Sets for Sony FS7II/FX9



Basic Set for Sony FS7II/FX9

Consists of:
 Top Plate for Sony FS7II/ FX9
 Plate for Sony FS7II/ FX9
 Lens Adapter Support LAS-1
 Support Rods 240mm/9.4in, Ø15mm
 15mm LWS Rod Console

[KK.0035874](#)

K2.0034691
 K2.0035830
 K2.0003899
 K2.66253.0
 K2.65264.0

Pro Set for Sony FS7II/FX9

Consists of:
 Plate for Sony FS7II/ FX9
 Top Plate for Sony FS7II/ FX9
 Lens Adapter Support LAS-1
 E- to PL-Mount Support for Vocas
 Side Bracket Right for Sony FS7II/FX9
 Side Bracket Left for Sony FS7II/FX9
 Viewfinder Bracket for Sony FS7II/ FX9
 Camera Center Handle CCH-4
 Sliding Adapter for CCH-4
 Rod Mounting Bracket RMB-3
 15mm Reduction Insert
 15mm LWS Rod Console
 Support Rods 240mm/9.4in, Ø15mm

[KK.0035875](#)

K2.0035830
 K2.0034691
 K2.0003899
 K2.0034700
 K2.0034709
 K2.0034727
 K2.0034657
 K2.0017270
 K2.0019282
 K2.0006186
 K2.66255.0
 K2.65264.0
 K2.66253.0



Viewfinder Bracket for Sony FS7II/FX9, [K2.0034657](#)



Plate for Sony FS7II/FX9 [K2.0035830](#)



Top Plate for Sony FS7II/FX9, [K2.0034691](#)



E- to PL-Mount Support for Vocas [K2.0034700](#)



Side Bracket Right for Sony FS7II/FX9 [K2.0034709](#)



Side Bracket Left for Sony FS7II/FX9, [K2.0034727](#)

Sets for Sony PXW-FS7 / FS7 II **



Basic Set for Sony PXW-FS7 / FS7 II **

Consists of:
 Adapter Plate for Sony PXW-FS7
 Lens Adapter Support LAS-1
 Support Rods 240 mm Ø 15mm

[KK.0006716](#)

K2.0003684
 K2.0003899
 K2.66253.0

Top/Bottom Sony Viewfinder Set for Sony PXW-FS7 / FS7 II **

Consists of:
 Adapter Plate for Sony PXW-FS7
 Lens Adapter Support LAS-1
 Support Rods 240 mm Ø 15mm
 Top Plate for Sony PXW-FS7

[KK.0006717](#)

K2.0003684
 K2.0003899
 K2.66253.0
 K2.0003722

Pro Set for Sony PXW-FS7 / FS7 II **

Consists of:
 Adapter Plate for Sony PXW-FS7
 Lens Adapter Support LAS-1
 Support Rods 240 mm Ø 15mm
 Top Plate for Sony PXW-FS7
 Center Camera Handle, CCH-2
 Viewfinder Bracket for Sony PXW-FS7
 15 mm LWS Rod Console
 Support Rods 140 mm Ø 15mm

[KK.0006718](#)

K2.0003684
 K2.0003899
 K2.66253.0
 K2.0003722
 K2.73002.0
 K2.0003749
 K2.65264.0
 K2.66254.0

Pro Set for Sony PXW-FS7/ FS7 II / BP-8 **

Consists of:
 Adapter Plate for Sony PXW-FS7
 Lens Adapter Support LAS-1
 Support Rods 240 mm Ø 15mm
 Top Plate for Sony PXW-FS7
 Center Camera Handle, CCH-2
 Viewfinder Bracket for Sony PXW-FS7
 15 mm LWS Rod Console
 Support Rods 140 mm Ø 15mm
 Bridge Plate BP-8 Set (19 mm Rods)

[KK.0006719](#)

K2.0003684
 K2.0003899
 K2.66253.0
 K2.0003722
 K2.73002.0
 K2.0003749
 K2.65264.0
 K2.66254.0
 K2.47090.0

Pro Set for Sony PXW-FS7/ FS7 II / BP-9 **

Consists of:
 Adapter Plate for Sony PXW-FS7
 Lens Adapter Support LAS-1
 Support Rods 240 mm Ø 15mm
 Top Plate for Sony PXW-FS7
 Center Camera Handle, CCH-2
 Viewfinder Bracket for Sony PXW-FS7
 15 mm LWS Rod Console
 Support Rods 140 mm Ø 15mm
 Bridge Plate BP-9 Set (15 mm Rods)

[KK.0006720](#)

K2.0003684
 K2.0003899
 K2.66253.0
 K2.0003722
 K2.73002.0
 K2.0003749
 K2.65264.0
 K2.66254.0
 K2.47091.0



Adapter Plate for Sony PXW-FS7/ FS7 II, [K2.0003684 **](#)



Top Plate for Sony PXW-FS7 / FS7 II, [K2.0003722 **](#)



Viewfinder Bracket for Sony PXW-FS7/ FS7 II, [K2.0003749 **](#)



Lens Adapter Support LAS-1, [K2.0003899 **](#)

Accessories for Sony F5 / F55



Adapter Plate for Sony PMW F5/F55, [K2.66246.0](#)



Broadcast Plate for Sony PMW F5/F55, [K2.66261.0](#)



Shoulder Pad for Sony PMW F5/F55, [K2.66249.0](#)



Top Plate for Sony PMW F5/F55 [K2.66247.0](#)



Camera Center Handle CCH-2, [K2.73002.0](#)



Viewfinder Adapter for F5/F55 (VFA-1), [K2.66248.0](#)



Viewfinder Plug Protection for Sony PMW F5/F55 [K2.66251.0](#) (excl. Top Plate)



Microphone Holder Bracket MHB-1, [K2.66256.0](#)



Shoulder Belt Adapters SBA-1 [K2.0001223](#)



Rosette for Broadcast Plate, ULB-4, [K2.47639.0](#)



Handgrip on/off for Sony F5/F55, [K2.66278.0](#) (RS-4 Pin)
 Spare Cable for Handgrip



Bracket for Sony AXSR7 Recorder, [K2.0013401](#)

For Sony FS-700

Handgrip Adapter HGA-2 for Sony FS-700, [K2.66210.0**](#)

Handgrip Adapter HGA-2 for Sony FS-700 handgrip. Convert the Sony Rosette with 1/4" thread to ARRI Standard



**** discontinued items
 no stock available anymore**