

## Sets for Canon EOS C300 MkIII / C500 MkII



**Basic Set for Canon C300 MkIII / C500 MkII** [KK.0033625](#)  
 Consists of:  
 Plate for Canon C300 Mk III / C500 MkII K2.0033439  
 Bridge Plate Adapter BPA-5 K2.0017138  
 Support Rods 340mm, Ø15mm K2.66252.0



**Pro Set for Canon C300 MkIII / C500 MkII** [KK.0037326](#)  
 Consists of:  
 Top Plate for Canon C300 MkIII / C500 MkII K2.0033441  
 Plate for Canon C500 MkII K2.0033439  
 Bridge Plate Adapter BPA-5 K2.0017138  
 Camera Center Handle CCH-4 K2.0017270  
 Sliding Adapter for CCH-4 K2.0019282  
 Rod Mounting Bracket RMB-3 K2.0006186  
 15mm Reduction Insert K2.66255.0  
 Mini Viewfinder Bracket MVB-1 K2.0006140  
 Bracket for Canon LM-V1 K2.0015520  
 Support Rods 340mm, Ø15mm K2.66252.0  
 Side Bracket Left for C300 MkIII / C500 MkII K2.0037185  
 Side Bracket Right for C300 MkIII / C500 MkII K2.0037183

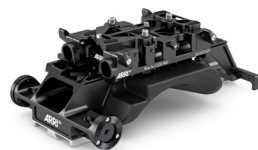


Plate for Canon C300 MkIII / C500 MkII, [K2.0033439](#)



Top Plate for Canon C300 MkIII / C500 MkII, [K2.0033441](#)



Side Bracket Left for C300 MkIII / C500 MkII [K2.0037185](#)



Side Bracket Right for C300 MkIII / C500 MkII [K2.0037183](#)

## Sets for Canon C300 / C300 Mk II / C500



**Basic Cine Set for Canon C300 Mk II** [KK.0007700](#)  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II** [KK.0007705](#)  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II + BP-8** [KK.0007703](#)  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II + BP-9** [KK.0007704](#)  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Broadcast Set for Canon C300 Mk II** [KK.0007702](#)  
 Consists of:  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

**Basic Broadcast Set for Canon C300 Mk II** [KK.0007699](#)  
 Consists of:  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0

**Pro Broadcast Set for Canon C300 Mk II + QRP-1**, Consists of: [KK.0007701](#)  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

## Sets for Canon C200

**Basic Cine Set for Canon C200** [KK.0016044](#)  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Cine Plate C300 Mk II K2.0006864  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C200** [KK.0016051](#)  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Cine Plate C300 Mk II K2.0006864  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Top Plate for Canon C200 K2.0015513  
 Center Camera Handle, CCH-2 K2.73002.0  
 Shoulder Pad CSP-1 K2.0006807  
 Monitor Bracket for Canon C200 K2.0015520  
 Viewfinder Mounting Bracket MVB-1 K2.0006140

**Pro Broadcast Set for Canon C200 + QRP-1** [KK.0016052](#)  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Broadcast Plate C300 Mk II K2.0006797  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Top Plate for Canon C200 K2.0015513  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399  
 Monitor Bracket for Canon C200 K2.0015520  
 Viewfinder Mounting Bracket MVB-1 K2.0006140



Adapter Plate for Canon C200 [K2.0015518](#)



Top Plate for Canon C200 [K2.0015513](#)



Monitor Bracket for Canon C200 [K2.0015520](#)

## Viewfinder Brackets for Canon



Viewfinder Bracket for Canon C700, [K2.0013195](#)



EVF bracket for Canon Monitor Unit, [K2.0008955](#)

## Sets for Canon C700

**Pro Set for Canon C700** [KK.0013598](#)  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0

**Cine 19mm Pro Set for Canon C700** [KK.0013597](#)  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0

**Cine 15mm Pro Set for Canon C700** [KK.0013599](#)  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0

**Broadcast Pro Set for Canon C700** [KK.0013596](#)  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399



Plate for Canon C700 [K2.0013191](#)



Top Plate for Canon C700 [K2.0013229](#)



Viewfinder Bracket for Canon C700, [K2.0013195](#)



**Handgrip Adapter HGA-1 Set LBS-2** [KK.0005673](#)  
 Consists of (without rods):  
 Handgrip Adapter, HGA-1 K2.66191.0  
 Lightweight Bridge Support, LBS-2 K2.66275.0