

Disassembly and Storage

Fold the Lightbank flat and store in the supplied storage sack.

Tips for Care and Use

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444 1812.

Warranty Information

At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. **This warranty does not apply to expendables, such as light bulbs, and certain OEM products.**



POP Banks for ARRI SkyPanel S30, S60 & S120



Instructions for Care and Use

Assembly

NOTE: The images below show a SkyPanel S60, but the method of installation is the same for the S30 & S120.

1. Remove the SkyPanel POP Bank from the sack and unfold until it takes its rectangular shape. You should hear a POP! When the edges are straightened.



2. Next, pull the POP Bank over the front face of the SkyPanel. The POP Bank should sit just over the lip on the front of the fixture.



****NOTE:** The S120 has clear-vinyl support straps that run across the front of the fixture.



3. Run the attached Velcro straps through the D-ring on the bottom of the POP Bank. Tighten until they sit flat against the rear of the SkyPanel.

4. Attach the supplied Front Screen and your SkyPanel POP Bank is ready for use!



Verify the straps are correctly positioned on your fixture by comparing to the images below:



S30



S60



S120