

How to replace the lamp in your ARRILITE 750 Plus




ARRILITE 750 Plus

How to replace the lamp?



Read the short instructions to learn more about your lamphead and how to operate it.

Always **disconnect the lamphead from the power supply or mains** before opening the housing.

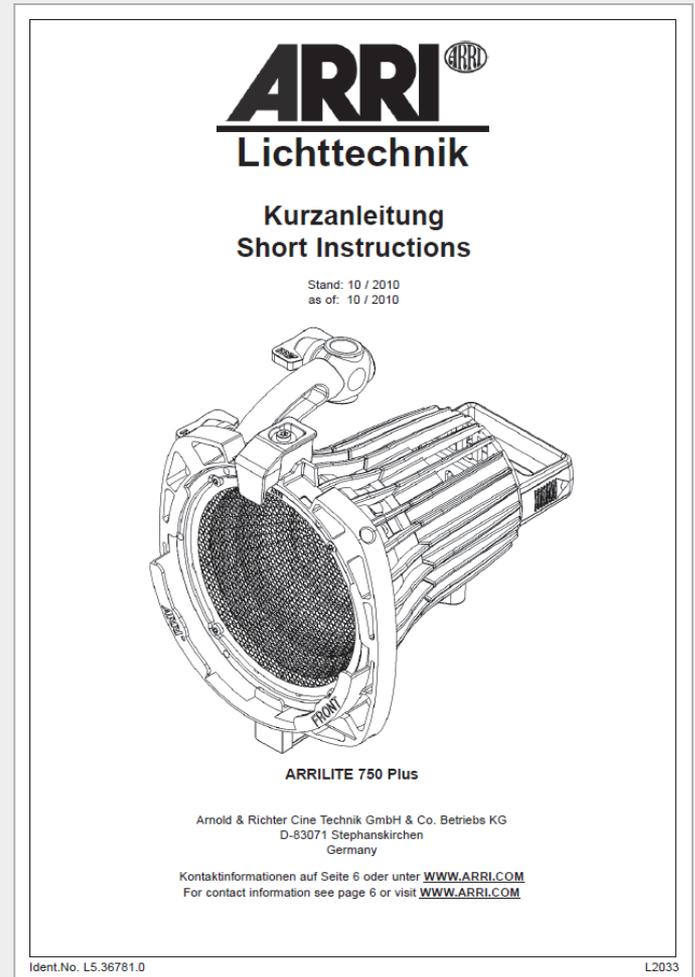

How to replace the lamp?



1 The lamphousing (back part) is removable. It contains the lamp holder.



2 Unlock the lamp housing by pulling the release slide on the grip handle backwards with your thumb and turn the lamp housing counter-clockwise, until the position marks are matching.




3 Carefully take off the lamp housing, holding it at the grip handle and guide the glass lamp through the reflector opening. Reflector housing and lamp housing are firmly connected with a grounding strap.



4 Pull the lamp retainer aside...



5 ... and carefully pull the lamp out of the lamp holder holding it at the lamp socket.

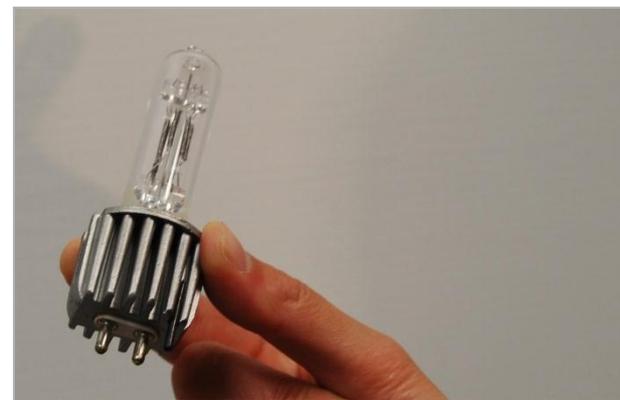


6


How to replace the lamp?



7 Pull the lamp retainer aside again and insert the new lamp carefully into the lamp holder holding the lamp at its socket.

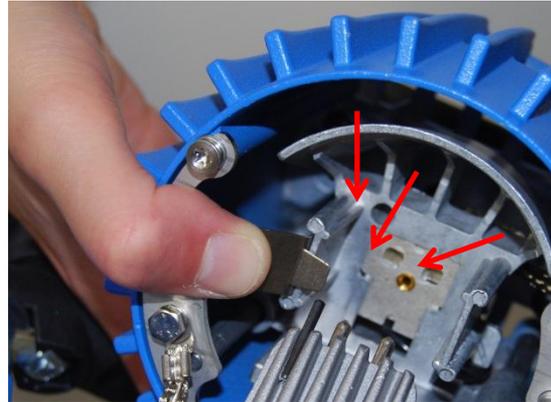

8 Make sure that the lamp will be inserted in the correct position and all pins of the lampbase slide into the socket.

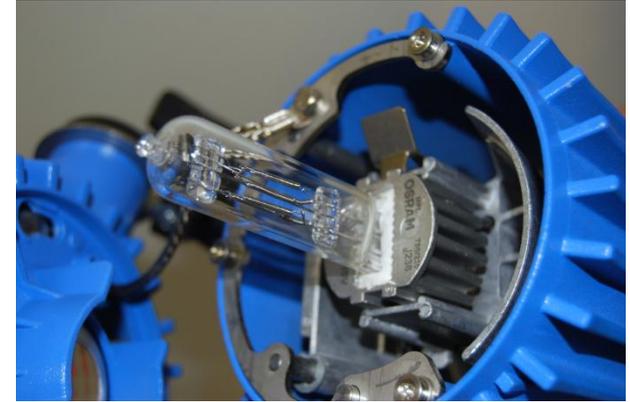


9 Make sure that the lamp retainer prevents the lamp from falling out.



10 Take the lamp housing at the grip handle and carefully guide the lamp through the reflector opening.



11 Make sure that the guide pins of the lamphousing (3 in total) slip into the holes of the reflector housing (3 in total). Be careful that the grounding strap is not squeezed.

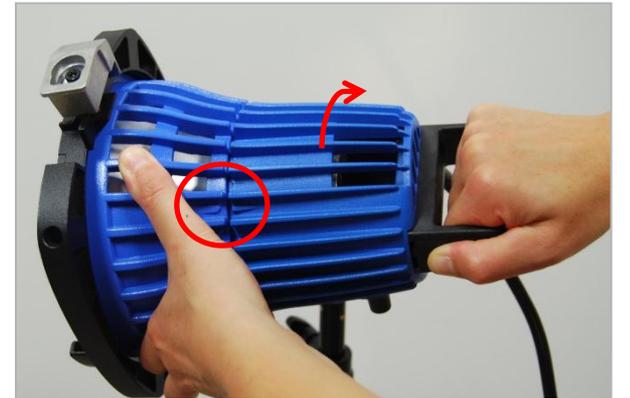

12 Position the two housing parts so that the position marks are matching. Lock the lamphousing by turning it clockwise.