

## Configuration Overview | 5.3.0 / 2020.05


### Sets for Canon EOS C300 MkIII / C500 MkII



**Basic Set for Canon C300 MkIII / C500 MkII** **KK.0033625**  
 Consists of:  
 Plate for Canon C300 Mk III / C500 MkII K2.0033439  
 Bridge Plate Adapter BPA-5 K2.0017138  
 Support Rods 340mm, Ø15mm K2.66252.0



**Pro Set for Canon C300 MkIII / C500 MkII** **KK.0037326**  
 Consists of:  
 Top Plate for Canon C300 MkIII / C500 MkII K2.0033441  
 Plate for Canon C500 MkII K2.0033439  
 Bridge Plate Adapter BPA-5 K2.0017138  
 Camera Center Handle CCH-4 K2.0017270  
 Sliding Adapter for CCH-4 K2.0019282  
 Rod Mounting Bracket RMB-3 K2.0006186  
 15mm Reduction Insert K2.66255.0  
 Mini Viewfinder Bracket MVB-1 K2.0006140  
 Bracket for Canon LM-V1 K2.0015520  
 Support Rods 340mm, Ø15mm K2.66252.0  
 Side Bracket Left for C300 MkIII / C500 MkII K2.0037185  
 Side Bracket Right for C300 MkIII / C500 MkII K2.0037183

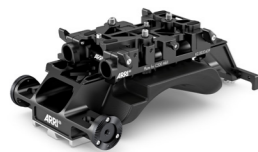

**Plate for Canon C300 MkIII / C500 MkII**, K2.0033439



**Top Plate for Canon C300 MkIII / C500 MkII**, K2.0033441



**Side Bracket Left for C300 MkIII / C500 MkII**  
K2.0037185



**Side Bracket Right for C300 MkIII / C500 MkII**  
K2.0037183

### Sets for Canon C300 / C300 Mk II / C500



**Basic Cine Set for Canon C300 Mk II** **KK.0007700**  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II** **KK.0007705**  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II + BP-8** **KK.0007703**  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C300 Mk II + BP-9** **KK.0007704**  
 Consists of:  
 Cine Plate C300 MkII K2.0006864  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Broadcast Set for Canon C300 Mk II** **KK.0007702**  
 Consists of:  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

**Basic Broadcast Set for Canon C300 Mk II** **KK.0007699**  
 Consists of:  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0

**Pro Broadcast Set for Canon C300 Mk II + QRP-1** **KK.0007701**  
 Consists of:  
 Broadcast Plate C300 MkII K2.0006797  
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0  
 Top Plate C300 MkII K2.0006859  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399  
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

### Sets for Canon C200

**Basic Cine Set for Canon C200** **KK.0016044**  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Cine Plate C300 Mk II K2.0006864  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Shoulder Pad CSP-1 K2.0006807

**Pro Cine Set for Canon C200** **KK.0016051**  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Cine Plate C300 Mk II K2.0006864  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Top Plate for Canon C200 K2.0015513  
 Center Camera Handle, CCH-2 K2.73002.0  
 Shoulder Pad CSP-1 K2.0006807  
 Monitor Bracket for Canon C200 K2.0015520  
 Viewfinder Mounting Bracket MVB-1 K2.0006140

**Pro Broadcast Set for Canon C200 + QRP-1** **KK.0016052**  
 Consists of:  
 Adapter Plate for Canon C200 K2.0015518  
 Broadcast Plate C300 Mk II K2.0006797  
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0  
 Top Plate for Canon C200 K2.0015513  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399  
 Monitor Bracket for Canon C200 K2.0015520  
 Viewfinder Mounting Bracket MVB-1 K2.0006140



**Adapter Plate for Canon C200**  
K2.0015518



**Top Plate for Canon C200**  
K2.0015513



**Monitor Bracket for Canon C200**  
K2.0015520

### Viewfinder Brackets for Canon



**Viewfinder Bracket for Canon C700**, K2.0013195



**EVF bracket for Canon Monitor Unit**, K2.0008955

### Sets for Canon C700

**Pro Set for Canon C700** **KK.0013598**  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0

**Cine 19mm Pro Set for Canon C700** **KK.0013597**  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0

**Cine 15mm Pro Set for Canon C700** **KK.0013599**  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0

**Broadcast Pro Set for Canon C700** **KK.0013596**  
 Consists of:  
 Plate for Canon C700 K2.0013191  
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0  
 Top Plate for Canon C700 K2.0013229  
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140  
 Viewfinder bracket for Canon C700 K2.0013195  
 Center Camera Handle, CCH-2 K2.73002.0  
 Quick Release Plate, QRP-1 K2.0000399



**Plate for Canon C700**  
K2.0013191



**Top Plate for Canon C700**  
K2.0013229



**Viewfinder Bracket for Canon C700**, K2.0013195



**Handgrip Adapter HGA-1 Set LBS-2** **KK.0005673**  
 Consists of (without rods):  
 Handgrip Adapter, HGA-1 K2.66191.0  
 Lightweight Bridge Support, LBS-2 K2.66275.0