ALEXA 35 Live - Multicam Sys. LPS-1 Fiber Camera Adapter - Controls for Camera Operators ARR



Configuration Overview | 2.2.0 / 2024.05

Controls	
CALL	Signals camera operator wants to talk
PROD	Volume of production intercom
ENG	Volume of engineering intercom
PMG	Volume of program audio on intercom
TRACKER	Volume of tracker intercom
PRD	Enables intercom production channel microphone
ENG	Enables intercom engineering channel microphone
REL	Push release button to make a change with A OUT button
A OUT	Switches between AES or analog line level for A OUT when REL is pushed

Controls	
REL	Push release button to make a change with A1 IN button
A1 IN	Switches between MIC 48V/MIC/LINE/AES for A1 IN when REL is pushed
REL	Unlocks (releases) the A2 IN button
A2 IN	Switches between MIC 48V/MIC/LINE/AES for A2 IN once unlocked
SEL	Selects one of the four return in channels for allocation to RET2 button
RT2	Switches from PGM video to the selected return in channel
SEL	Selects one of the four return in channels for allocation to RET1 button
RT1	Switches from PGM video to the selected return in channel

