



# SkyPanel® Updating Firmware

F I R M W A R E   U P D A T E   I N S T R U C T I O N S

# Updating SkyPanel<sup>®</sup> Firmware

To update the Firmware of your SkyPanel<sup>®</sup> choose one of the following methods.

## Using a USB Stick

1. Use a USB stick that is USB version 1.0 or 2.0 and is formatted to FAT or FAT32.
2. The update file (.upd) must be in the root directory of the drive.
3. Make sure the USB Mode on the SkyPanel<sup>®</sup> is set to “Normal”.  
(Menu → Fixture Settings → USB Mode → Normal)
4. Insert the USB stick into the SkyPanel<sup>®</sup>. The fixture will automatically look for the update files. When found, a list of update files will appear in the display.
5. Highlight the update file and push the encoder knob. The update will begin.
6. Do not remove the USB stick until the file is completely copied.

## Using ALSM (ARRI Lighting Service Manager)

1. Install the ALSM onto your Mac or PC.  
Download at: [www.arri.com/lightingsoftware](http://www.arri.com/lightingsoftware)
2. Open the application and connect the SkyPanel<sup>®</sup> to the computer via Ethernet cable.
3. The ALSM will automatically find your fixture once powered on and connected.
4. Select the “Firmware Update” tab and then select the fixture you wish to update in the column on the left side of the screen.
5. Click “Update Firmware” to begin the update.
6. Do not disconnect your fixture from the power source or from the computer until the update is complete.

## Service

If you have problems with your fixture or the update, please contact an ARRI service Center.

Europe: [service-lighting@arri.de](mailto:service-lighting@arri.de)

Americas: [service-lighting@arri.com](mailto:service-lighting@arri.com)

Asia & Australia: [service-lighting@arri.hk](mailto:service-lighting@arri.hk)

## Helpful Website

[www.arri.com/lightingsoftware](http://www.arri.com/lightingsoftware)