





FIRMWARE UPDATE INSTRUCTIONS



# **Updating Orbiter Firmware**

To update the firmware of your Orbiter choose one of the following methods.

### Using a USB Stick

- 1. Use a USB stick that is USB version 1.0 or 2.0 and is formatted to FAT or FAT32.
- 2. The update file (.swu) must be in the root directory of the drive.
- 3. Insert the USB stick into the Orbiter®.
- Open MENU → Flash Drive Functions → Update Firmware.
   The fixture will automatically look for the update files. When found, a list of update files will appear in the display.
- 5. Highlight the update file and push the encoder knob. The update will begin.
- 6. Do not remove the USB stick until the file is completely copied.

## **Using ALSM (ARRI Lighting Service Manager)**

- 1. Install the ALSM onto your Mac or PC.
  - Download at: www.arri.com/ligthing/alsm
- 2. Open the application and connect the Orbiter to the computer via Ethernet cable.
- 3. The ALSM will automatically find your fixture once powered on and connected.
- 4. Select the "Firmware Update" tab and then select the fixture you wish to update in the column on the left side of the screen.
- 5. Click "Update Firmware" to begin the update.
- 6. Do not disconnect your fixture from the power source or from the computer until the update is complete.

# **Using the Orbiter Web Page**

- 1. Connect the Orbiter to your LAN via an Ethernet cable.
- 2. Use your favorite Internet browser to open the Orbiter web page via its IP address, e.g. http://192.168.0.36
  - <u>Note</u>: If you do not know the IP address of your Orbiter, use the Control Panel and open MENU  $\rightarrow$  Network Settings
- 3. By clicking enter the "Fixture Settings" menu that can be found on the top of the web page. The "Firmware Update" section is located at the top of the page.
- 4. Choose the update file (.swu) via the "Browse" button.
- 5. Click Update.



#### **Service**

If you have problems with your fixture or the update, please contact an ARRI service center.

Europe: <u>service-lighting@arri.de</u>
Americas: <u>service-lighting@arri.com</u>

Asia: service@arri.asia
China: service@arri.cn

Australia: <a href="mailto:service@arri.com.au">service@arri.com.au</a>

## **Helpful Website**

LIOS www.arri.com/lios