

Sets for Canon EOS C300 MkIII / C500 MkII



Basic Set for Canon C300 MkIII / C500 MkII [KK.0033625](#)
 Consists of:
 Plate for Canon C300 Mk III / C500 MkII [K2.0033439](#)
 Bridge Plate Adapter BPA-5 [K2.0017138](#)
 Support Rods 340mm, Ø15mm [K2.66252.0](#)



Pro Set for Canon C300 MkIII / C500 MkII [KK.0037326](#)
 Consists of:
 Top Plate for Canon C300 MkIII / C500 MkII [K2.0033441](#)
 Plate for Canon C500 MkII [K2.0033439](#)
 Bridge Plate Adapter BPA-5 [K2.0017138](#)
 Camera Center Handle CCH-4 [K2.0017270](#)
 Sliding Adapter for CCH-4 [K2.0019282](#)
 Rod Mounting Bracket RMB-3 [K2.0006186](#)
 15mm Reduction Insert [K2.66255.0](#)
 Mini Viewfinder Bracket MVB-1 [K2.0006140](#)
 Bracket for Canon LM-V1 [K2.0015520](#)
 Support Rods 340mm, Ø15mm [K2.66252.0](#)
 Side Bracket Left for C300 MkIII / C500 MkII [K2.0037185](#)
 Side Bracket Right for C300 MkIII / C500 MkII [K2.0037183](#)



Plate for Canon C300 MkIII / C500 MkII, [K2.0033439](#)

Top Plate for Canon C300 MkIII / C500 MkII, [K2.0033441](#) *



Side Bracket Left for C300 MkIII / C500 MkII [K2.0037185](#)

Side Bracket Right for C300 MkIII / C500 MkII [K2.0037183](#)

* discontinued items
no stock available anymore

Sets for Canon C300 / C300 Mk II / C500



Basic Cine Set for Canon C300 Mk II [KK.0007700](#)
 Consists of:
 Cine Plate C300 MkII [K2.0006864](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II [KK.0007705](#)
 Consists of:
 Cine Plate C300 MkII [K2.0006864](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Top Plate C300 MkII [K2.0006859](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II + BP-8 [KK.0007703](#)
 Consists of:
 Cine Plate C300 MkII [K2.0006864](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Top Plate C300 MkII [K2.0006859](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Bridge Plate BP-8 Set (19 mm Rods) [K2.47090.0](#)
 3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II + BP-9 [KK.0007704](#)
 Consists of:
 Cine Plate C300 MkII [K2.0006864](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Top Plate C300 MkII [K2.0006859](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Bridge Plate BP-9 Set (15 mm Rods) [K2.47091.0](#)
 3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)

Pro Broadcast Set for Canon C300 Mk II [KK.0007702](#)
 Consists of:
 Broadcast Plate C300 MkII [K2.0006797](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Top Plate C300 MkII [K2.0006859](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)

Basic Broadcast Set for Canon C300 Mk II [KK.0007699](#)
 Consists of:
 Broadcast Plate C300 MkII [K2.0006797](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)

Pro Broadcast Set for Canon C300 Mk II + QRP-1, [KK.0007701](#)
 Consists of:
 Broadcast Plate C300 MkII [K2.0006797](#)
 Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
 Top Plate C300 MkII [K2.0006859](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Quick Release Plate, QRP-1 [K2.0000399](#)
 3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)

Sets for Canon C200

Basic Cine Set for Canon C200 [KK.0016044](#)
 Consists of:
 Adapter Plate for Canon C200 [K2.0015518](#)
 Cine Plate C300 Mk II [K2.0006864](#)
 Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C200 [KK.0016051](#)
 Consists of:
 Adapter Plate for Canon C200 [K2.0015518](#)
 Cine Plate C300 Mk II [K2.0006864](#)
 Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
 Top Plate for Canon C200 [K2.0015513](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Shoulder Pad CSP-1 [K2.0006807](#)
 Monitor Bracket for Canon C200 [K2.0015520](#)
 Viewfinder Mounting Bracket MVB-1 [K2.0006140](#)

Pro Broadcast Set for Canon C200 + QRP-1 [KK.0016052](#)
 Consists of:
 Adapter Plate for Canon C200 [K2.0015518](#)
 Broadcast Plate C300 Mk II [K2.0006797](#)
 Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
 Top Plate for Canon C200 [K2.0015513](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Quick Release Plate, QRP-1 [K2.0000399](#)
 Monitor Bracket for Canon C200 [K2.0015520](#)
 Viewfinder Mounting Bracket MVB-1 [K2.0006140](#)



Adapter Plate for Canon C200 [K2.0015518](#) *



Top Plate for Canon C200 [K2.0015513](#) *



Monitor Bracket for Canon C200 [K2.0015520](#) *

* discontinued items
only as long as stock is available (single item)

Viewfinder Brackets for Canon



Viewfinder Bracket for Canon C700, [K2.0013195](#)



EVF bracket for Canon Monitor Unit, [K2.0008955](#)

Sets for Canon C700

Pro Set for Canon C700 [KK.0013598](#)
 Consists of:
 Plate for Canon C700 [K2.0013191](#)
 Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
 Top Plate for Canon C700 [K2.0013229](#)
 Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
 Viewfinder bracket for Canon C700 [K2.0013195](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)

Cine 19mm Pro Set for Canon C700 [KK.0013597](#)
 Consists of:
 Plate for Canon C700 [K2.0013191](#)
 Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
 Top Plate for Canon C700 [K2.0013229](#)
 Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
 Viewfinder bracket for Canon C700 [K2.0013195](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Bridge Plate BP-8 Set (19 mm Rods) [K2.47090.0](#)

Cine 15mm Pro Set for Canon C700 [KK.0013599](#)
 Consists of:
 Plate for Canon C700 [K2.0013191](#)
 Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
 Top Plate for Canon C700 [K2.0013229](#)
 Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
 Viewfinder bracket for Canon C700 [K2.0013195](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Bridge Plate BP-9 Set (15 mm Rods) [K2.47091.0](#)

Broadcast Pro Set for Canon C700 [KK.0013596](#)
 Consists of:
 Plate for Canon C700 [K2.0013191](#)
 Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
 Top Plate for Canon C700 [K2.0013229](#)
 Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
 Viewfinder bracket for Canon C700 [K2.0013195](#)
 Center Camera Handle, CCH-2 [K2.73002.0](#)
 Quick Release Plate, QRP-1 [K2.0000399](#)



Plate for Canon C700 [K2.0013191](#)



Top Plate for Canon C700 [K2.0013229](#)



Viewfinder Bracket for Canon C700, [K2.0013195](#)



Handgrip Adapter HGA-1 Set LBS-2 [KK.0005673](#)
 Consists of (without rods):
 Handgrip Adapter, HGA-1 [K2.66191.0](#)
 Lightweight Bridge Support, LBS-2 [K2.66275.0](#)