

Accessories for Canon Cameras C200, C300, C300MkII, C300MkIII, C500, C500MkII, C700



Configuration Overview | 5.3.0 / 2024.06

Sets for Canon EOS C300 MkIII / C500 MkII



Basic Set for Canon C300 MkIII / C500 MkII [KK.0033625](#)
Consists of:
Plate for Canon C300 Mk III / C500 MkII [K2.0033439](#)
Bridge Plate Adapter BPA-5 [K2.0017138](#)
Support Rods 340mm, Ø15mm [K2.66252.0](#)



Pro Set for Canon C300 MkIII / C500 MkII [KK.0037326](#)
Consists of:
Top Plate for Canon C300 MkIII / C500 MkII [K2.0033441](#)
Plate for Canon C500 MkII [K2.0033439](#)
Bridge Plate Adapter BPA-5 [K2.0017138](#)
Camera Center Handle CCH-4 [K2.0017270](#)
Sliding Adapter for CCH-4 [K2.0019282](#)
Rod Mounting Bracket RMB-3 [K2.0006186](#)
15mm Reduction Insert [K2.66255.0](#)
Mini Viewfinder Bracket MVB-1 [K2.0006140](#)
Bracket for Canon LM-V1 [K2.0015520](#)
Support Rods 340mm, Ø15mm [K2.66252.0](#)
Side Bracket Left for C300 MkIII / C500 MkII [K2.0037185](#)
Side Bracket Right for C300 MkIII / C500 MkII [K2.0037183](#)



Plate for Canon C300 MkIII / C500 MkII, [K2.0033439](#)



Top Plate for Canon C300 MkIII / C500 MkII, [K2.0033441](#) *



Side Bracket Left for C300 MkIII / C500 MkII [K2.0037185](#)



Side Bracket Right for C300 MkIII / C500 MkII [K2.0037183](#)

* discontinued items
no stock available anymore

Sets for Canon C300 / C300 Mk II / C500



Basic Cine Set for Canon C300 Mk II [KK.0007700](#)
Consists of:
Cine Plate C300 MkII [K2.0006864](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II [KK.0007705](#)
Consists of:
Cine Plate C300 MkII [K2.0006864](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Top Plate C300 MkII [K2.0006859](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II + BP-8 [KK.0007703](#)
Consists of:
Cine Plate C300 MkII [K2.0006864](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Top Plate C300 MkII [K2.0006859](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Bridge Plate BP-8 Set (19 mm Rods) [K2.47090.0](#)
3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C300 Mk II + BP-9 [KK.0007704](#)
Consists of:
Cine Plate C300 MkII [K2.0006864](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Top Plate C300 MkII [K2.0006859](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Bridge Plate BP-9 Set (15 mm Rods) [K2.47091.0](#)
3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)

Pro Broadcast Set for Canon C300 Mk II [KK.0007702](#)
Consists of:
Broadcast Plate C300 MkII [K2.0006797](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Center Camera Handle, CCH-2 [K2.0006859](#)
3/8" Accessory Shoe Adapter, 18.65mm square [K2.73002.0](#)
Quick Release Plate, QRP-1 [K2.54077.0](#)

Basic Broadcast Set for Canon C300 Mk II [KK.0007699](#)
Consists of:
Broadcast Plate C300 MkII [K2.0006797](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)

Pro Broadcast Set for Canon C300 Mk II + QRP-1, Consists of: [KK.0007701](#)
Broadcast Plate C300 MkII [K2.0006797](#)
Support Rods 340 mm (13.4"), Ø 15 mm [K2.66252.0](#)
Top Plate C300 MkII [K2.0006859](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Quick Release Plate, QRP-1 [K2.0000399](#)
3/8" Accessory Shoe Adapter, 18.65mm square [K2.54077.0](#)

Sets for Canon C200

Basic Cine Set for Canon C200 [KK.0016044](#)
Consists of:
Adapter Plate for Canon C200 [K2.0015518](#)
Cine Plate C300 Mk II [K2.0006864](#)
Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)

Pro Cine Set for Canon C200 [KK.0016051](#)
Consists of:
Adapter Plate for Canon C200 [K2.0015518](#)
Cine Plate C300 Mk II [K2.0006864](#)
Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
Top Plate for Canon C200 [K2.0015513](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Shoulder Pad CSP-1 [K2.0006807](#)
Monitor Bracket for Canon C200 [K2.0015520](#)
Viewfinder Mounting Bracket MVB-1 [K2.0006140](#)

Pro Broadcast Set for Canon C200 + QRP-1 [KK.0016052](#)
Consists of:
Adapter Plate for Canon C200 [K2.0015518](#)
Broadcast Plate C300 Mk II [K2.0006797](#)
Support Rods 340 mm (13.4 inch), Ø 15 mm [K2.66252.0](#)
Top Plate for Canon C200 [K2.0015513](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Quick Release Plate, QRP-1 [K2.0000399](#)
Monitor Bracket for Canon C200 [K2.0015520](#)
Viewfinder Mounting Bracket MVB-1 [K2.0006140](#)



Adapter Plate for Canon C200 [K2.0015518](#) *



Monitor Bracket for Canon C200 [K2.0015520](#) *



Top Plate for Canon C200 [K2.0015513](#) *

* discontinued items
only as long as stock is
available (single item)

Viewfinder Brackets for Canon



Viewfinder Bracket for Canon C700, [K2.0013195](#)



EVF bracket for Canon Monitor Unit, [K2.0008955](#)

Sets for Canon C700

Pro Set for Canon C700 [KK.0013598](#)
Consists of:
Plate for Canon C700 [K2.0013191](#)
Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
Top Plate for Canon C700 [K2.0013229](#)
Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
Viewfinder bracket for Canon C700 [K2.0013195](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)

Cine 19mm Pro Set for Canon C700 [KK.0013597](#)
Consists of:
Plate for Canon C700 [K2.0013191](#)
Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
Top Plate for Canon C700 [K2.0013229](#)
Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
Viewfinder bracket for Canon C700 [K2.0013195](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Bridge Plate BP-8 Set (19 mm Rods) [K2.47090.0](#)

Cine 15mm Pro Set for Canon C700 [KK.0013599](#)
Consists of:
Plate for Canon C700 [K2.0013191](#)
Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
Top Plate for Canon C700 [K2.0013229](#)
Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
Viewfinder bracket for Canon C700 [K2.0013195](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Bridge Plate BP-9 Set (15 mm Rods) [K2.47091.0](#)

Broadcast Pro Set for Canon C700 [KK.0013596](#)
Consists of:
Plate for Canon C700 [K2.0013191](#)
Support Rods 240 mm (9.4 inch), Ø 15 mm [K2.66253.0](#)
Top Plate for Canon C700 [K2.0013229](#)
Viewfinder mounting bracket Mini (MVB-1) [K2.0006140](#)
Viewfinder bracket for Canon C700 [K2.0013195](#)
Center Camera Handle, CCH-2 [K2.73002.0](#)
Quick Release Plate, QRP-1 [K2.0000399](#)



Plate for Canon C700 [K2.0013191](#)



Top Plate for Canon C700 [K2.0013229](#)



Viewfinder Bracket for Canon C700, [K2.0013195](#)



Handgrip Adapter HGA-1 Set LBS-2 [KK.0005673](#)
Consists of (without rods):
Handgrip Adapter, HGA-1 [K2.66191.0](#)
Lightweight Bridge Support, LBS-2 [K2.66275.0](#)