

Accessories for Canon Cameras



CONFIGURATION OVERVIEW – 6.2.2 / 2017.08

© 2010 Arnold & Richter Cine Technik GmbH & Co. Betriebs KG. All rights reserved. This material is provided "as is" for information purposes only without any warranty. ARRI assumes no responsibility with regard to the performance or use of the products or typographical errors or inaccuracies of given information. Product specifications are subject to change without notice. For a full listing of all available components consult the price list.

Sets for Canon C700

Pro Set for Canon C700 KK.0013598

Consists of:	
Plate for Canon C700	K2.0013191
Support Rods 240 mm (9.4 inch), Ø 15 mm	K2.66253.0
Top Plate for Canon C700	K2.0013229
Viewfinder mounting bracket Mini (MVB-1)	K2.0006140
Viewfinder bracket for Canon C700	K2.0013195
Center Camera Handle, CCH-2	K2.73002.0

Cine 19mm Pro Set for Canon C700 KK.0013597

Consists of:	
Plate for Canon C700	K2.0013191
Support Rods 240 mm (9.4 inch), Ø 15 mm	K2.66253.0
Top Plate for Canon C700	K2.0013229
Viewfinder mounting bracket Mini (MVB-1)	K2.0006140
Viewfinder bracket for Canon C700	K2.0013195
Center Camera Handle, CCH-2	K2.73002.0
Bridge Plate BP-8 Set (19 mm Rods)	K2.47090.0

Cine 15mm Pro Set for Canon C700 KK.0013599

Consists of:	
Plate for Canon C700	K2.0013191
Support Rods 240 mm (9.4 inch), Ø 15 mm	K2.66253.0
Top Plate for Canon C700	K2.0013229
Viewfinder mounting bracket Mini (MVB-1)	K2.0006140
Viewfinder bracket for Canon C700	K2.0013195
Center Camera Handle, CCH-2	K2.73002.0
Bridge Plate BP-9 Set (15 mm Rods)	K2.47091.0

Broadcast Pro Set for Canon C700 KK.0013596

Consists of:	
Plate for Canon C700	K2.0013191
Support Rods 240 mm (9.4 inch), Ø 15 mm	K2.66253.0
Top Plate for Canon C700	K2.0013229
Viewfinder mounting bracket Mini (MVB-1)	K2.0006140
Viewfinder bracket for Canon C700	K2.0013195
Center Camera Handle, CCH-2	K2.73002.0
Quick Release Plate, QRP-1	K2.0000399



Plate for Canon C700
K2.0013191

Top Plate for Canon C700
K2.0013229



Viewfinder Bracket for Canon C700, K2.0013195



Handgrip Adapter HGA-1 Set LBS-2 KK.0005673
Consists of (without rods):
Handgrip Adapter, HGA-1 K2.66191.0
Lightweight Bridge Support, LBS-2 K2.66275.0

Sets for Canon C200

Basic Cine Set for Canon C200 KK.0016044

Consists of:	
Adapter Plate for Canon C200	K2.0015518
Cine Plate C300 Mk II	K2.0006864
Support Rods 340 mm (13.4 inch), Ø 15 mm	K2.66252.0
Shoulder Pad CSP-1	K2.0006807

Pro Cine Set for Canon C200 KK.0016051

Consists of:	
Adapter Plate for Canon C200	K2.0015518
Cine Plate C300 Mk II	K2.0006864
Support Rods 340 mm (13.4 inch), Ø 15 mm	K2.66252.0
Top Plate for Canon C200	K2.0015513
Center Camera Handle, CCH-2	K2.73002.0
Shoulder Pad CSP-1	K2.0006807
Monitor Bracket for Canon C200	K2.0015520
Viewfinder Mounting Bracket MVB-1	K2.0006140

Pro Broadcast Set for Canon C200 + QRP-1 KK.0016052

Consists of:	
Adapter Plate for Canon C200	K2.0015518
Broadcast Plate C300 Mk II	K2.0006797
Support Rods 340 mm (13.4 inch), Ø 15 mm	K2.66252.0
Top Plate for Canon C200	K2.0015513
Center Camera Handle, CCH-2	K2.73002.0
Quick Release Plate, QRP-1	K2.0000399
Monitor Bracket for Canon C200	K2.0015520
Viewfinder Mounting Bracket MVB-1	K2.0006140



Adapter Plate for Canon C200
K2.0015518



Top Plate for Canon C200
K2.0015513



Monitor Bracket for Canon C200
K2.0015520

Viewfinder Brackets



Viewfinder Bracket for Canon C700, K2.0013195



EVF bracket for Canon Monitor Unit, K2.0008955

Sets for Canon C300 /C300 Mk II / C500



Basic Cine Set for Canon C300 Mk II KK.0007700

Consists of:	
Cine Plate C300 MkII	K2.0006864
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Shoulder Pad CSP-1	K2.0006807

Pro Cine Set for Canon C300 Mk II KK.0007705

Consists of:	
Cine Plate C300 MkII	K2.0006864
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Top Plate C300 MkII	K2.0006859
Center Camera Handle, CCH-2	K2.73002.0
3/8" Accessory Shoe Adapter, 18.65mm square	K2.54077.0
Shoulder Pad CSP-1	K2.0006807

Pro Cine Set for Canon C300 Mk II + BP-8 KK.0007703

Consists of:	
Cine Plate C300 MkII	K2.0006864
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Top Plate C300 MkII	K2.0006859
Center Camera Handle, CCH-2	K2.73002.0
Bridge Plate BP-8 Set (19 mm Rods)	K2.47090.0
3/8" Accessory Shoe Adapter, 18.65mm square	K2.54077.0
Shoulder Pad CSP-1	K2.0006807

Pro Cine Set for Canon C300 Mk II + BP-9 KK.0007704

Consists of:	
Cine Plate C300 MkII	K2.0006864
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Top Plate C300 MkII	K2.0006859
Center Camera Handle, CCH-2	K2.73002.0
Bridge Plate BP-9 Set (15 mm Rods)	K2.47091.0
3/8" Accessory Shoe Adapter, 18.65mm square	K2.54077.0
Shoulder Pad CSP-1	K2.0006807

Pro Broadcast Set for Canon C300 Mk II KK.0007702

Consists of:	
Broadcast Plate C300 MkII	K2.0006797
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Top Plate C300 MkII	K2.0006859
Center Camera Handle, CCH-2	K2.73002.0
3/8" Accessory Shoe Adapter, 18.65mm square	K2.54077.0

Basic Broadcast Set for Canon C300 Mk II KK.0007699

Consists of:	
Broadcast Plate C300 MkII	K2.0006797
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0

Pro Broadcast Set for Canon C300 Mk II + QRP-1, Consists of: KK.0007701

Broadcast Plate C300 MkII	K2.0006797
Support Rods 340 mm (13.4"), Ø 15 mm	K2.66252.0
Top Plate C300 MkII	K2.0006859
Center Camera Handle, CCH-2	K2.73002.0
Quick Release Plate, QRP-1	K2.0000399
3/8" Accessory Shoe Adapter, 18.65mm square	K2.54077.0