

Configuration Overview | 5.2.1 / 2019.12

Sets for Sony Venice

Basic Set for Sony Venice

- Consists of:
- Plate For Sony Venice K2.0017137
 - Bridge Plate Adapter BPA-5 K2.0017138
 - Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 - Quick Release Plate, QRP-1 K2.0000399



KK.0017141

Pro Set for Sony Venice

- Consists of:
- Plate For Sony Venice K2.0017137
 - Bridge Plate Adapter BPA-5 K2.0017138
 - Top Plate For Sony Venice K2.0017024
 - Camera Center Handle CCH-4 K2.0017270
 - Rod mounting bracket RMB-3 K2.0006186
 - Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 - Quick Release Plate, QRP-1 K2.0000399
 - Sliding Adapter for CCH-4 K2.0019282



KK.0017142

EVF bracket Set for Sony DVF-EL200

- Consists of:
- EVF bracket for Sony DVF-EL200 (Venice) K2.021525
 - Mini Viewfinder Bracket MVB-1 K2.006140



KK.0022326



Plate For Sony Venice
K2.0017137



Top Plate For Sony Venice
K2.0017024



Bridge Plate Adapter BPA-5, K2.0017138



Camera Center Handle CCH-4, K2.0017270



Sliding Adapter for CCH-4
K2.0019282



EVF bracket for Sony DVF-EL200 (Venice), K2.021525

Venice Extension Unit Set Basic

- Consists of:
- Base Plate for Venice Ext. Unit K2.0024564
 - Top Plate for Venice Ext. Unit K2.0024565
 - Side Bracket Right for Venice Ext. Unit K2.0024566
 - Side Bracket Left for Venice Ext. Unit K2.0024761
 - Cable Clamp for Venice Ext. Unit K2.0024569
 - Back Plate for Venice Ext. Unit K2.0024573
 - Rosette Adapters, RA-6, pair K2.0024574



KK.0024806

Venice Extension Unit Set Basic

- Consists of:
- Base Plate for Venice Ext. Unit K2.0024564
 - Top Plate for Venice Ext. Unit K2.0024565
 - Side Bracket Right for Venice Ext. Unit K2.0024566
 - Side Bracket Left for Venice Ext. Unit K2.0024761
 - Cable Clamp for Venice Ext. Unit K2.0024569
 - Back Plate for Venice Ext. Unit K2.0024573
 - Rosette Adapters, RA-6, pair K2.0024574
 - Cage Top Handle, CTH-1 K2.66227.0
 - 15mm LWS Rod Console K2.65264.0
 - Rod Mounting Bracket RMB-3 K2.0006186
 - 15mm Reduction Insert K2.66255.0
 - Support Rods 140mm, 5.5in, Ø15mm K2.66254.0
 - Support Rods 240mm/9.4in, Ø15mm K2.66253.0
 - Wooden Handgrip WHG-1 K2.0024965



Base Plate for Venice Ext. Unit, K2.0024564



Top Plate for Venice Ext. Unit, K2.0024565



Back Plate for Venice Ext. Unit, K2.0024573

 


Side Bracket Left for Venice Ext. Unit, K2.0024761

Sets for Sony F5 / F55

Basic Set for Sony PMW F5/F55 LWS

- Consists of:
- Adapter Plate for Sony PMW F5/F55 K2.66246.0
 - Support Rods 240mm Ø 15mm K2.66253.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0

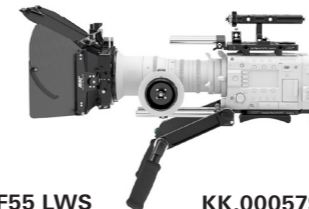

KK.0005798

Pro Set for Sony PMW F5/F55 LWS

- Consists of:
- Adapter Plate for Sony PMW F5/F55 K2.66246.0
 - Support Rods 240mm Ø 15mm K2.66253.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 - Top Plate for Sony PMW F5/F55 K2.66247.0
 - Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 - Center Camera Handle, CCH-2 K2.73002.0
 - Viewfinder Plug Protection for F5/F55 K2.66251.0

Set for Sony PMW F5/F55 + BP-8

- Consists of:
- Adapter Plate for Sony PMW F5/F55 K2.66246.0
 - Support Rods 240mm Ø 15mm K2.66253.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 - Top Plate for Sony PMW F5/F55 K2.66247.0
 - Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 - Center Camera Handle, CCH-2 K2.73002.0
 - Bridge Plate BP-8 Set (19mm Rods) K2.47090.0
 - Viewfinder Plug Protection for F5/F55 K2.66251.0

Set for Sony PMW F5/F55 + BP-9

- Consists of:
- Adapter Plate for Sony PMW F5/F55 K2.66246.0
 - Support Rods 240mm Ø 15mm K2.66253.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 - Top Plate for Sony PMW F5/F55 K2.66247.0
 - Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 - Center Camera Handle, CCH-2 K2.73002.0
 - Bridge Plate BP-9 Set (15mm Rods) K2.47091.0
 - Viewfinder Plug Protection for F5/F55 K2.66251.0

Broadcast Plate Set for Sony PMW F5/F55

- Consists of:
- Broadcast Plate for Sony PMW F5/F55 K2.66261.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 - 15mm Rods 240 mm K2.66253.0

Pro Broadcast Plate Set for Sony F5/F55

- Consists of:
- Broadcast Plate for Sony PMW F5/F55 K2.66261.0
 - Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 - 15mm Rods 240 mm K2.66253.0
 - Top Plate for Sony PMW F5/F55 K2.66247.0
 - Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 - Center Camera Handle, CCH-2 K2.73002.0
 - Viewfinder Plug Protection for F5/F55 K2.66251.0

Set Rosettes for Broadcast Sony/ULB-4

- Consists of:
- Rosette for Broadcast Plate/ULB-4 (2x) K2.47639.0

Accessories for Sony F5 / F55

Adapter Plate for Sony PMW F5/F55, K2.66246.0



Broadcast Plate for Sony PMW F5/F55, K2.66261.0



Shoulder Pad for Sony PMW F5/F55, K2.66249.0



Top Plate for Sony PMW F5/F55 K2.66247.0



Camera Center Handle CCH-2, K2.73002.0



Viewfinder Adapter for F5/F55 (VFA-1), K2.66248.0



 
Viewfinder Plug Protection for Sony PMW F5/F55 K2.66251.0 (excl. Top Plate)



Microphone Holder Bracket MHB-1, K2.66256.0



Rosette for Broadcast Plate/ULB-4 K2.47639.0



Shoulder Belt Adapters SBA-1 K2.0001223



Bracket for Sony AXSR7 Recorder, K2.0013401



Handgrip on/off for Sony F5/F55, K2.66278.0 (RS-4 Pin) Spare Cable for Handgrip K2.66279.0



For Sony FS-700

Handgrip Adapter HGA-2 for Sony FS-700, K2.66210.0**

Handgrip Adapter HGA-2 for Sony FS-700 handgrip. Convert the Sony Rosette with 1/4" thread to ARRI Standard



**** discontinued items no stock available anymore**