

Accessories for Sony Cameras



CONFIGURATION OVERVIEW – 6.2.1 / 2018.12

© 2010 Arnold & Richter Cine Technik GmbH & Co. Betriebs KG. All rights reserved. This material is provided "as is" for information purposes only without any warranty. ARRI assumes no responsibility with regard to the performance or use of the products or typographical errors or inaccuracies of given information. Product specifications are subject to change without notice. For a full listing of all available components consult the price list.

Sets for Sony Venice



Basic Set for Sony Venice **KK.0017141**
 Consists of:
 Plate For Sony Venice K2.0017137
 Bridge Plate Adapter BPA-5 K2.0017138
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 Quick Release Plate, QRP-1 K2.0000399



Pro Set for Sony Venice **KK.0017142**
 Consists of:
 Plate For Sony Venice K2.0017137
 Bridge Plate Adapter BPA-5 K2.0017138
 Top Plate For Sony Venice K2.0017024
 Camera Center Handle CCH-4 K2.0017270
 Rod mounting bracket RMB-3 K2.0006186
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 Quick Release Plate, QRP-1 K2.0000399
 Sliding Adapter for CCH-4 K2.0019282



EVF bracket Set for Sony DVF-EL200 **KK.0022326**
 Consists of:
 EVF bracket for Sony DVF-EL200 (Venice) K2.021525
 Mini Viewfinder Bracket MVB-1 K2.006140



Plate For Sony Venice
K2.0017137



Top Plate For Sony Venice
K2.0017024



Bridge Plate Adapter BPA-5, K2.0017138



Camera Center Handle CCH-4, K2.0017270



Sliding Adapter for CCH-4
K2.0019282



EVF bracket for Sony DVF-EL200 (Venice), K2.021525

Sets for Sony PXW-FS7 / FS7 II



Basic Set for Sony PXW-FS7 / FS7 II **KK.0006716**
 Consists of:
 Adapter Plate for Sony PXW-FS7 K2.0003684
 Lens Adapter Support LAS-1 K2.0003899
 Support Rods 240 mm Ø 15mm K2.66253.0

Top/Bottom Sony Viewfinder Set for Sony PXW-FS7 / FS7 II **KK.0006717**
 Consists of:
 Adapter Plate for Sony PXW-FS7 K2.0003684
 Lens Adapter Support LAS-1 K2.0003899
 Support Rods 240 mm Ø 15mm K2.66253.0
 Top Plate for Sony PXW-FSK K2.0003722

Pro Set for Sony PXW-FS7 / FS7 II **KK.0006718**
 Consists of:
 Adapter Plate for Sony PXW-FS7 K2.0003684
 Lens Adapter Support LAS-1 K2.0003899
 Support Rods 240 mm Ø 15mm K2.66253.0
 Top Plate for Sony PXW-FS7 K2.0003722
 Center Camera Handle, CCH-2 K2.73002.0
 Viewfinder Bracket for Sony PXW-FS7 K2.0003749
 15 mm LWS Rod Console K2.65264.0
 Support Rods 140 mm Ø 15mm K2.66254.0

Pro Set for Sony PXW-FS7/ FS7 II / BP-8 **KK.0006719**
 Consists of:
 Adapter Plate for Sony PXW-FS7 K2.0003684
 Lens Adapter Support LAS-1 K2.0003899
 Support Rods 240 mm Ø 15mm K2.66253.0
 Top Plate for Sony PXW-FS7 K2.0003722
 Center Camera Handle, CCH-2 K2.73002.0
 Viewfinder Bracket for Sony PXW-FS7 K2.0003749
 15 mm LWS Rod Console K2.65264.0
 Support Rods 140 mm Ø 15mm K2.66254.0
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0

Pro Set for Sony PXW-FS7/ FS7 II / BP-9 **KK.0006720**
 Consists of:
 Adapter Plate for Sony PXW-FS7 K2.0003684
 Lens Adapter Support LAS-1 K2.0003899
 Support Rods 240 mm Ø 15mm K2.66253.0
 Top Plate for Sony PXW-FS7 K2.0003722
 Center Camera Handle, CCH-2 K2.73002.0
 Viewfinder Bracket for Sony PXW-FS7 K2.0003749
 15 mm LWS Rod Console K2.65264.0
 Support Rods 140 mm Ø 15mm K2.66254.0
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0



Adapter Plate for Sony PXW-FS7/ FS7 II, K2.0003684



Top Plate for Sony PXW-FS7 / FS7 II, K2.0003722



Viewfinder Bracket for Sony PXW-FS7/ FS7 II, K2.0003749



Lens Adapter Support LAS-1, K2.0003899

Sets for Sony F5 / F55

Basic Set for Sony PMW F5/F55 LWS **KK.0005798**
 Consists of:
 Adapter Plate for Sony PMW F5/F55 K2.66246.0
 Support Rods 240mm Ø 15mm K2.66253.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0

Pro Set for Sony PMW F5/F55 LWS **KK.0005810**
 Consists of:
 Adapter Plate for Sony PMW F5/F55 K2.66246.0
 Support Rods 240mm Ø 15mm K2.66253.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 Top Plate for Sony PMW F5/F55 K2.66248.0
 Viewfinder Adapter for F5/F55, VFA-1 K2.73002.0
 Center Camera Handle, CCH-2 K2.66251.0
 Viewfinder Plug Protection for F5/F55

Set for Sony PMW F5/F55 + BP-8 **KK.0005811**
 Consists of:
 Adapter Plate for Sony PMW F5/F55 K2.66246.0
 Support Rods 240mm Ø 15mm K2.66253.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 Top Plate for Sony PMW F5/F55 K2.66247.0
 Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-8 Set (19mm Rods) K2.47090.0
 Viewfinder Plug Protection for F5/F55 K2.66251.0

Set for Sony PMW F5/F55 + BP-9 **KK.0005812**
 Consists of:
 Adapter Plate for Sony PMW F5/F55 K2.66246.0
 Support Rods 240mm Ø 15mm K2.66253.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 Top Plate for Sony PMW F5/F55 K2.66247.0
 Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-9 Set (15mm Rods) K2.47091.0
 Viewfinder Plug Protection for F5/F55 K2.66251.0

Broadcast Plate Set for Sony PMW F5/F55 **KK.0005815**
 Consists of:
 Broadcast Plate for Sony PMW F5/F55 K2.66261.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 15mm Rods 240 mm K2.66253.0

Pro Broadcast Plate Set for Sony F5/F55 **KK.0005680**
 Consists of:
 Broadcast Plate for Sony PMW F5/F55 K2.66261.0
 Shoulder Pad for Sony PMW F5/F55 K2.66249.0
 15mm Rods 240 mm K2.66253.0
 Top Plate for Sony PMW F5/F55 K2.66247.0
 Viewfinder Adapter for F5/F55, VFA-1 K2.66248.0
 Center Camera Handle, CCH-2 K2.73002.0
 Viewfinder Plug Protection for F5/F55 K2.66251.0

Set Rosettes for Broadcast Sony/ULB-4 **KK.0005814**
 Consists of:
 Rosette for Broadcast Plate/ULB-4 (2x) K2.47639.0

Accessories for Sony F5 / F55



Adapter Plate for Sony PMW F5/F55, K2.66246.0



Broadcast Plate for Sony PMW F5/F55, K2.66261.0



Shoulder Pad for Sony PMW F5/F55, K2.66249.0



Top Plate for Sony PMW F5/F55
K2.66247.0



Camera Center Handle CCH-2, K2.73002.0



Viewfinder Adapter for F5/F55 (VFA-1), K2.66248.0



Viewfinder Plug Protection for Sony PMW F5/F55
K2.66251.0 (excl. Top Plate)



Microphone Holder Bracket MHB-1, K2.66256.0



Shoulder Belt Adapters SBA-1
K2.0001223



Rosette for Broadcast Plate/ULB-4
K2.47639.0



Handgrip on/off for Sony F5/F55, K2.66278.0 (RS-4 Pin)
Spare Cable for Handgrip
K2.66279.0



Bracket for Sony AXSR7 Recorder, K2.0013401

For Sony FS-700



Handgrip Adapter HGA-2 for Sony FS-700, K2.66210.0

Handgrip Adapter HGA-2 for Sony FS-700 handgrip. Convert the Sony Rosette with 1/4" thread to ARRI Standard

**** discontinued items no stock available anymore**