

# ALEXA Plus 4:3\*



CONFIGURATION OVERVIEW – 1.2.1 / 2013.12

© 2010 Arnold & Richter Cine Technik GmbH & Co. Betriebs KG. All rights reserved. This material is provided "as is" for information purposes only without any warranty. ARRI assumes no responsibility with regard to the performance or use of the products or typographical errors or inaccuracies of given information. Product specifications are subject to change without notice. For a full listing of all available components consult the price list.

## ALEXA Plus 4:3 Set



**ALEXA Plus 4:3 Camera Set:** K0.71150.D includes: \*

- K1.71150.0 - ALEXA Plus 4:3 camera body, tool set and manual
- K2.72046.0 - Storage Interface Module SIM-1 (SxS)
- K2.72034.0 - ProRes Codec Option
- K2.72035.0 - QuickTime File Format Option
- K2.72018.0 - SD Card
- K2.72008.0 - Electronic Viewfinder EVF-1
- K2.72042.0 - Viewfinder Mounting Bracket VMB-2
- K2.72012.0 - Viewfinder Cable Short (0.35m/1.2ft) KC 150-S
- K2.72007.0 - Center Camera Handle (CCH-1)
- K2.72002.0 - Wedge Adapter (WA-1)
- K2.72076.0 - High Speed License Key
- K2.72067.0 - Anamorphic De-squeeze License Key
- K2.72094.0 - DNxHD License Key

Note: SxS PRO cards and on-board battery adapters are not included and can be ordered separately.

No upgrade possible from ALEXA Plus to ALEXA Plus 4:3. Also available as Pro Sets including SxS PRO cards

\* discontinued items

## Power Supply & Battery Adapter

|  |  |
|--|--|
|  |  |
| <b>Power Cable</b><br>KC-20 K2.41966.0,<br>KC-29 K2.44693.0 (coiled) | <b>26V power supply NG 12/26 R</b><br>K2.47351.0             |
|  |  |
| <b>Battery Adapter Back for V Mount, BAB-V</b> K2.72010.0            | <b>Battery Adapter Back for Gold Mount, BAB-G</b> K2.72003.0 |
|  |  |
| <b>Battery Adapter Top for V Mount, BAT-V</b> K2.72011.0             | <b>Battery Adapter Top for Gold Mount, BAT-G</b> K2.72006.0  |

## Recorder Bracket



**Codex/ALEXA Onboard S Bracket Set** K0.60188.0  
Consists of (without rods):

|                                |            |
|--------------------------------|------------|
| Handle Extension Bracket HEB-3 | K4.72159.0 |
| Recorder Battery Hinge, RBH-1  | K2.66189.0 |
| Recorder Battery Plate, RBP-1  | K2.66188.0 |
| Codex Recorder Adapter CRA-2   | K2.66193.0 |

## Cables

**ALEXA 3D Cable Set,** K0.71032.0  
One ALEXA EXT to EXT Cable for sensor and HD outputs sync and one ALEXA Ethernet to Ethernet Cable for camera settings sync (Set incl. KC155-S, K2.72032.0 and KC156-S, K2.72033.0)

**UMC Connection Cable**  
K-UMC3-ALEXA, K2.65239.0

**ALEXA 12V Accessory Cable**  
KC 154-SP-S, K2.72031.0 (coiled)

**ALEXA Ethernet Cable 3m**  
KC 153-S, K2.72021.0

**ALEXA EXT - EXT Cable 2m**  
KC 155-S, K2.72032.0

**ALEXA Ethernet-Ethernet Cable 2M**  
KC 156-S, K2.72033.0

**ALEXA Ethernet Remote Cable (1m/3.3ft)**  
KC 158-S, K2.72041.0

**ALEXA Ethernet Remote Cable (2m/6.6ft)**  
KC 157-S, K2.72040.0

**ALEXA Ethernet Extension Cable (15m/50ft)**  
KC 159-S, K2.72043.0 (up to three KC-159-S for total length of 47m/154ft with K2.72040.0 or 46m/151ft with K2.72041.0)

**HDTV BNC Cable (HD-SDI)**

|        |                                   |
|--------|-----------------------------------|
| 0,25 m | black K2.47840.0, blue K2.47841.0 |
| 2 m    | black K2.47842.0, blue K2.47843.0 |
| 10 m   | black K2.47844.0, blue K2.47845.0 |
| 20 m   | black K2.47838.0, blue K2.47839.0 |

## Viewfinder System

|  |  |
|--|--|
|  |  |
| <b>Electronic Viewfinder EVF-1,</b> K2.72008.0 (spare)   | <b>Viewfinder Extension Bracket VEB-1,</b> K2.72000.0        |
|  |  |
| <b>Viewfinder Cable</b><br>35 cm, KC 150-S K2.72012.0<br>65 cm, KC 151-S K2.72013.0<br>200 cm, KC 152-S K2.72014.0 | <b>Viewfinder Mounting Bracket, VMB-2</b> K2.72042.0 (spare) |

## Licence Keys & Media

|  |   |
|--|---|
|  | <b>Anamorphic De-squeeze License</b> K2.72067.0 |
|  | <b>ALEXA High Speed License</b> K2.72076.0      |
|  | <b>DNxHD License Key License</b> K2.72094.0     |
|  | <b>SxS Adapter</b> K2.48838.0                   |
|  | <b>SxS PRO+ 128 GB</b> K2.0003106               |
|  | <b>SxS PRO+ 128 GB</b> K2.0003277 (5x)          |
|  | <b>SD card</b> K2.72018.0                       |

## Accessories

|   |  |  |  |   |
|---|--|--|--|---|
|   |  |  |  |   |
| <b>Remote Control Unit RCU-4,</b> K2.72036.0 (incl. ALEXA Ethernet Remote Cable (2m/6.6ft) KC 157-S K2.72040.0) | <b>ALEXA Rain Protector ARP-1,</b> K2.72026.0                                  | <b>Bridge Plate, BP-12 Set (incl. base plate &amp; rods) for 19 mm,</b> K0.71031.0<br><b>Bridge Plate, BP-13 Set (incl. base plate &amp; rods) for 15 mm,</b> K0.60165.0 | <b>Bridge Plate Adapter BPA-2</b> (for BP-3, 5, 8 or 9) K2.66172.0                           | <b>Universal Adapter Plate UPA-1,</b> K2.72102.0      |
|   |  |  |  |   |
| <b>Bridge Plate BP-8</b> K2.47090.0   | <b>Wedge Adapter, WA-1</b> (for Quick Release HD-Baseplate) K2.72002.0 (spare) | <b>Quick Release HD Baseplate</b> K2.47796.0   | <b>Low Mode Support Set, LMS-3</b> K2.72023.0  | <b>Centre Camera Handle CCH-1,</b> K2.72007.0 (spare) |
|   |  |  |  |   |
| <b>Side Camera Handle, SCH-1</b> K2.72016.0   | <b>Adjustable Center Grip tall, ACG-2,</b> K2.72022.0                          | <b>Handle Extension Block HEB-1</b> (without tape hook) K4.65107.0   | <b>Handle Extension Block HEB-2</b> with tape hook) K2.72015.0                               | <b>Shoulder Pad SP-4</b> K2.72083.0                   |
|   |  |  |  |   |
| <b>Camera Handgrip Right,</b> K2.45886.0  | <b>Extension for Handgrip</b> K2.47136.0                                       | <b>Leveling Block LB-1,</b> K2.72017.0   | <b>Ultrasonic Distance Measure UDM-1 Set</b> K0.60055.0<br><b>Cable UDM-ALEXA</b> K2.65261.0 | <b>Ext Distribution Box EDB-1</b> K2.72038.0          |
|   |  |  |  | <b>Case for ALEXA</b> K2.72030.0                      |