### **Disassembly and Storage**

Disassemble and repack the Soft Lantern for SkyPanel S360 by following the assembly instructions in reverse.

#### Tips for Care and Use

**Cleaning** - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

**Repair** - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

#### **Warranty Information**

At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.



# Soft Lantern and Skirt Kit for ARRI SkyPanel S360

Instructions for Care and Use



## **Assembly**

- 1. Begin by unfolding your \$360 Soft Lantern.
- 2. Looking at the inside of the Lantern fabric, Insert poles into pole sleeves, ensuring that the poles with the receiving tip are placed in opposite sleeves of the poles without receiving tip.



3. Insert the pole with no receiving tip in to the receiving end of the pole with tip. Repeat this process for the second set of poles.



4. When done correctly, the poles should meet as shown in this image.



5. Next, insert ferrule end of pole into the pockets on all 4 inside corners of the Lantern. The lantern should now take it's shape!




6. Next, place the elastic corner straps over the top two corners of the fixtures looping them over the foot eyelets. Repeat this process on the bottom two corners of the fixture.



7. Using the supplied straps, secure the Lantern to the fixture. The straps are designed to run through the blue handles on the corner of the fixture.



 8. Attach the included skirt to the velcro around the edge of the Lantern.



\*\*\*\*NOTE: Four attachment points for a safety bond are located on the outside of the Lightbank body, as highlighted in this picture.

