


Installation of Mounting Bracket for Microphone Pod DTS 1830-X K2.0021324

V 1 . 1

Date: October 4, 2021

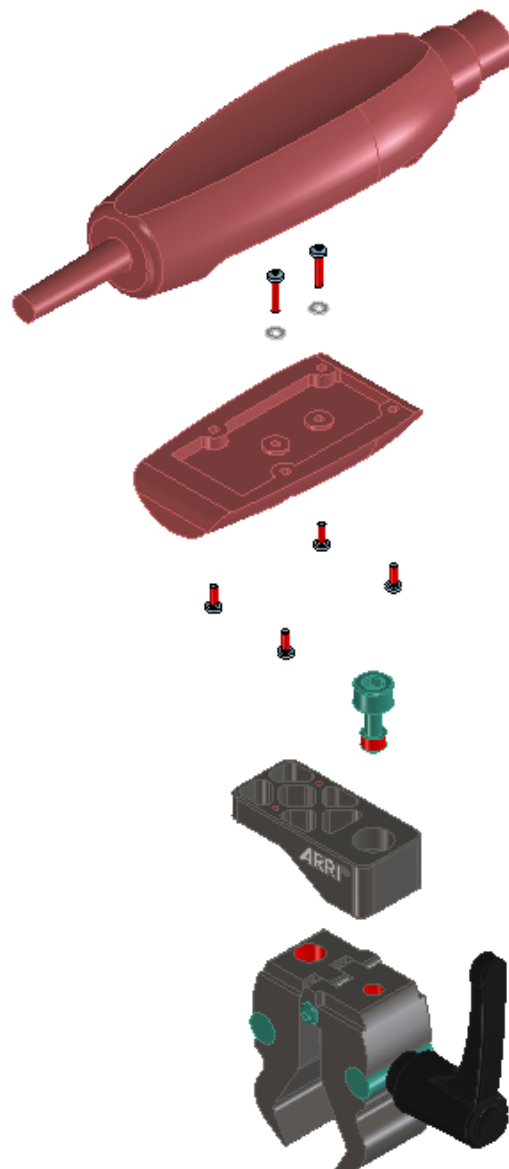

Version History

Version	Author	Change Note
2018-08-30	GA	Initial release
2021-10-04	J. Fachon	Release version

Description

This manual provides information on how to mount the microphone pod DTS-1830-X to a Manfrotto Nano Clamp using the ARRI Mounting bracket K2.0021324, allowing the DTS-1830-X to be kept readily available on a pan bar during operation.

Table of Contents

Version History	2
Description	Fehler! Textmarke nicht definiert.
Table of Contents	2
Tools and Content	2
Assembly Instructions	3
Contact	5

Tools and Content

The following tools are required


Tool	Size/ Type
Torx Screwdriver	T6
hexagonal socket wrench	5mm
Cross screwdriver	1

The following parts are provided:


Quant.	ARRI Ident.	Description
1	K5.69414.0	1-4-STATIVSCHRAUBE-SW5
1	K5.0021329	HALTERUNG
2	O5.15711.0	DISTANZSCHEIBE
2	O5.17317.0	FLACHKOPFSCHRAUBE-TX
1	50.0022253	Klemmhebel
1	K5.0022584	AUFKLEBER-MOUNTING-BRACKET-2D-BARCODE
1	O5.17132.0	LUFTPOL.-TASCHE 5 100X150 MM

Assembly instructions


1. Undo and remove the 4x screws securing the plastic cover to the DTS-1830-X unit using a Torx T6 driver
2. Remove the plastic cover

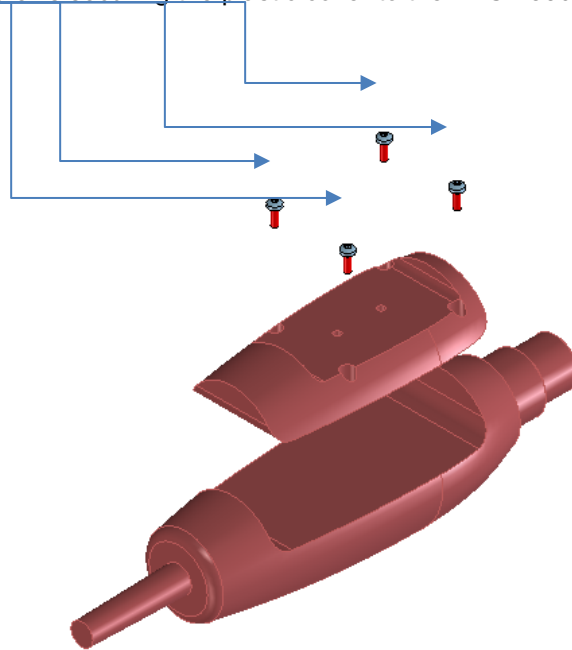


Using a 5mm hexagonal socket wrench, attach the Manfrotto Nano Clamp to the ARRI bracket K2.0021324 using the supplied 1/4" screw.

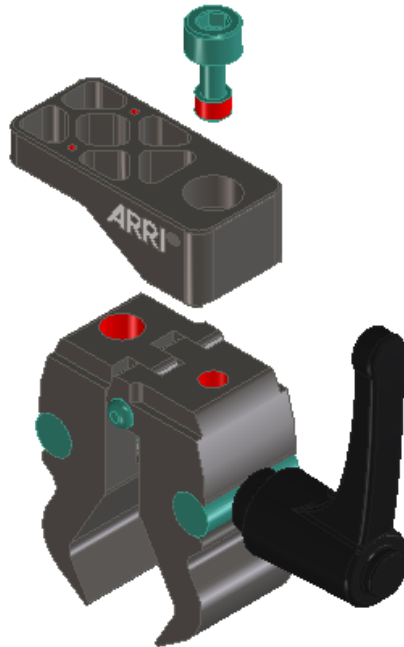

3. The DTS-1830-X cover can be attached to the assembly using the two supplied screws with a Torx T6 driver.

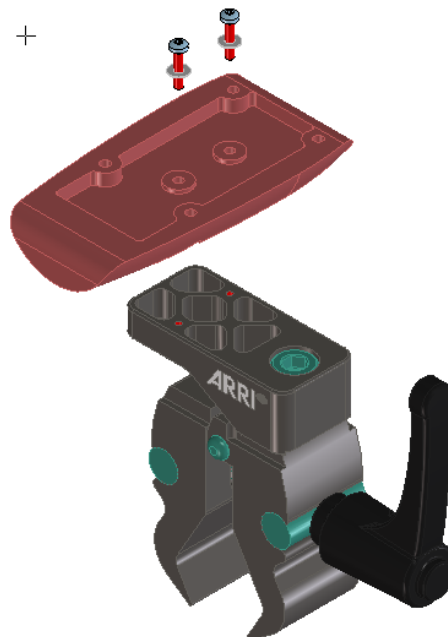

4. The cover can be reattached to the DTS-1830-X unit with the four original T6 screws from the unit.

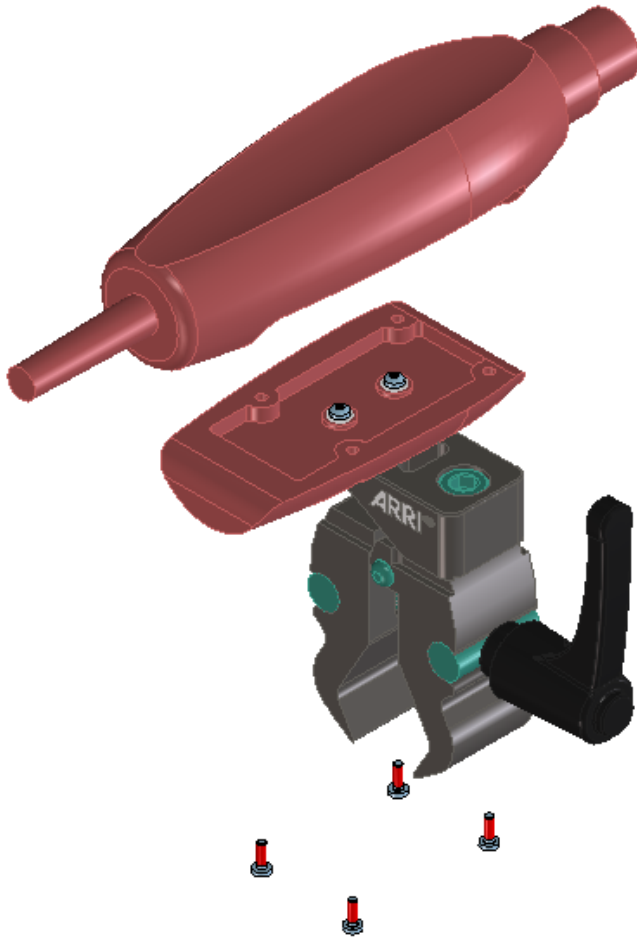

Contact

In case you have questions or recommendations, please contact ARRI Camera Service. For your nearest service center, please visit www.arri.com/service