ALEXA SXT Studio

CONFIGURATION OVERVIEW - 1.3.2 / 2016.09

© 2010 Arnold & Richter Cine Technik GmbH & Co. Betriebs KG. All rights reserved. This material is provided "as is" for information purposes only without any warrant ARRI assumes no responsibility with regard to the performance or use of the products or typographical errors or inaccuracies of given information. Product specifications are subject to change without notice. For a full listing of all available components consult the price list



A 35 format film-style digital camera with an optical viewfinder and four sensor modes: Open Gate, 4:3, 6:5 and 16:9. Includes a rotating mirror shutter, internal motorized ND1.3/optical clear filter slider and built-in Lens Data System. Records ARRIRAW onto in-camera SXR Capture Drives or XR Capture Drives. Records QuickTime ProRes (4444 XQ, 4444, 422 HQ or 422) files in recording resolutions of HD, 2K, 4K UHD or 4K Cine onto in-camera SXR Capture Drives, XR Capture Drives, SxS PRO cards (SxS Adapter 2 required), SxS PRO+ cards (SxS Adapter 2 required) or CFast 2.0 cards (CFast 2.0 Adapter 2 required). Can process ASC CDL values and 3D LUTs. Four independent monitoring outputs: EVF-1 and MON OUT 1, 2, 3. Exposure through physical mirror shutter (11.2° - 180.0°) or electronic rolling shutter (5.0° - 358.0°). Built-in real-time wireless lens and camera control with the ARRI Electronic Control System. One extra MON OUT and one extra RS socket, built-in 3D lens synchronization and motion sensors.

ALEXA SXT Studio Basic Camera Set, K0.0007027 Includes:

K1.0006987 1x ALEXA SXT Studio camera body K2.0008429 1x SXR Adapter K2.0008430 1x XR Adapter K2.72018.0 1x SD Card K2.72048.0 1x Optical Universal Viewfinder OVF-1 K2.47081.0 1x 435 8x Eyepiece K2.72007.0 1x Center Camera Handle (CCH-1) Note: SXR Capture Drives, XR Capture Drives, SxS Adapter 2, CFast 2.0 Adapter 2, docks, SxS PRO cards, SxS PRO+ cards, CFast 2.0 cards and on-board battery adapters are not included and can be ordered separately.

ALEXA SXT Studio Pro Camera Set KB.72003.D Includes: K0.0007753 1x SXT Studio Basic Camera Set for Pro Set K0.71034.0 1x ALEXA Bundle Accessory Set (Studio) K2.0006942 4x SXR Capture Drive 1 TB Note: Docks or on-board battery adapters are not included and can be ordered separately.

Media & Adapters




For details regarding **Recording Medias please see Configuration Overview 1.6.5**





435 Finder Extender FE-5, 200mm, K2.47304.0 FE-3, 295mm, K2.47082.0

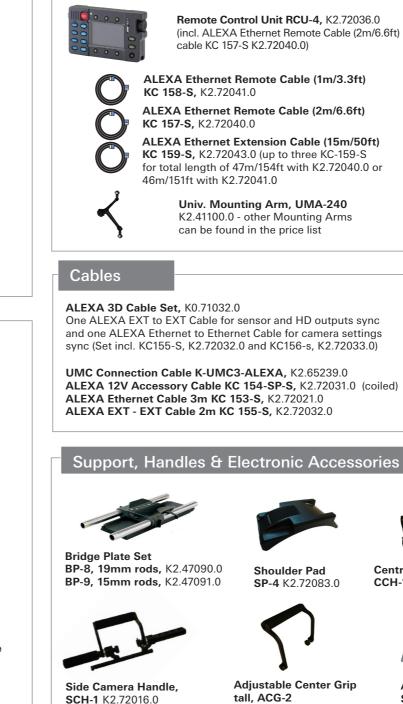

Remote Control Unit

100

Ground Glass/ Frameglow Tool, K4.52722.0

Case for ALEXA Handle Extension Block HEB-2 Studio, K2.72075.0

K2.72015.0

Ultrasonic Distance Measure UDM-1 Set K0.60055.0 Cable UDM-ALEXA K2.65261.0



K2 72022 0





Brackets



Rod Mounting Bracket RMB- 2, K0.60209.0

Ground Glass & Frameglow Mask



Ground Glasses & Frameglow Masks need to be ordered seperately. They are not included in the ALEXA Studio Set

Ground Glass 4:3, Spherical, 800 K2.72069.0 Ground Glass 4:3, Spherical, 1200 K2.72090.0 Ground Glass 16:9, Spherical, 800 K2.72088.0 Ground Glass 16:9, Spherical, 1200 K2.72089.0 Frameglow Mask, 4:3 and 16:9 Spherical, K2.72073.0

Ground Glass 4:3, Scope 2x, 800 K2.72070.0 Ground Glass 4:3, Scope 2x, 1200 K2.72091.0 Frameglow Mask 4:3, Scope 2x K2.72074.0

Ground Glass 4:3, Blank 800 K2.72079.0 Ground Glass 4:3, Blank 1200 K2.72092.0 Ground Glass 16:9. Blank 800 K2.72096.0 Ground Glass 16:9, Blank 1200 K2.72097.0 Frameglow Mask for Blank Ground Glasses, K2.72095.0



Centre Camera Handle CCH-1, K2.72007.0 (spare)





Low Mode Support Set LMS-3 K2.72023.0 **ALEXA Studio LMS Feet** K2 72093 0



Camera Handgrip Right, K2.45886.0



ARP-1, K2.72026.0



Extension for Handgrip K2 47136.0





Battery Adapter Back for V Mount, BAB-V K2.72010.0 Battery Adapter Back for Gold Mount, BAB-G K2.72003.0 Battery Adapter Top for Gold Mount, BAT-G K2.72006.0