


Hi-5 and RIA-1 - Sample Configurations ALEXA Mini / ALEXA Mini LF



Configuration Overview | 4.2.6 / 2022.08

ALEXA Mini / ALEXA Mini LF with OCU-1

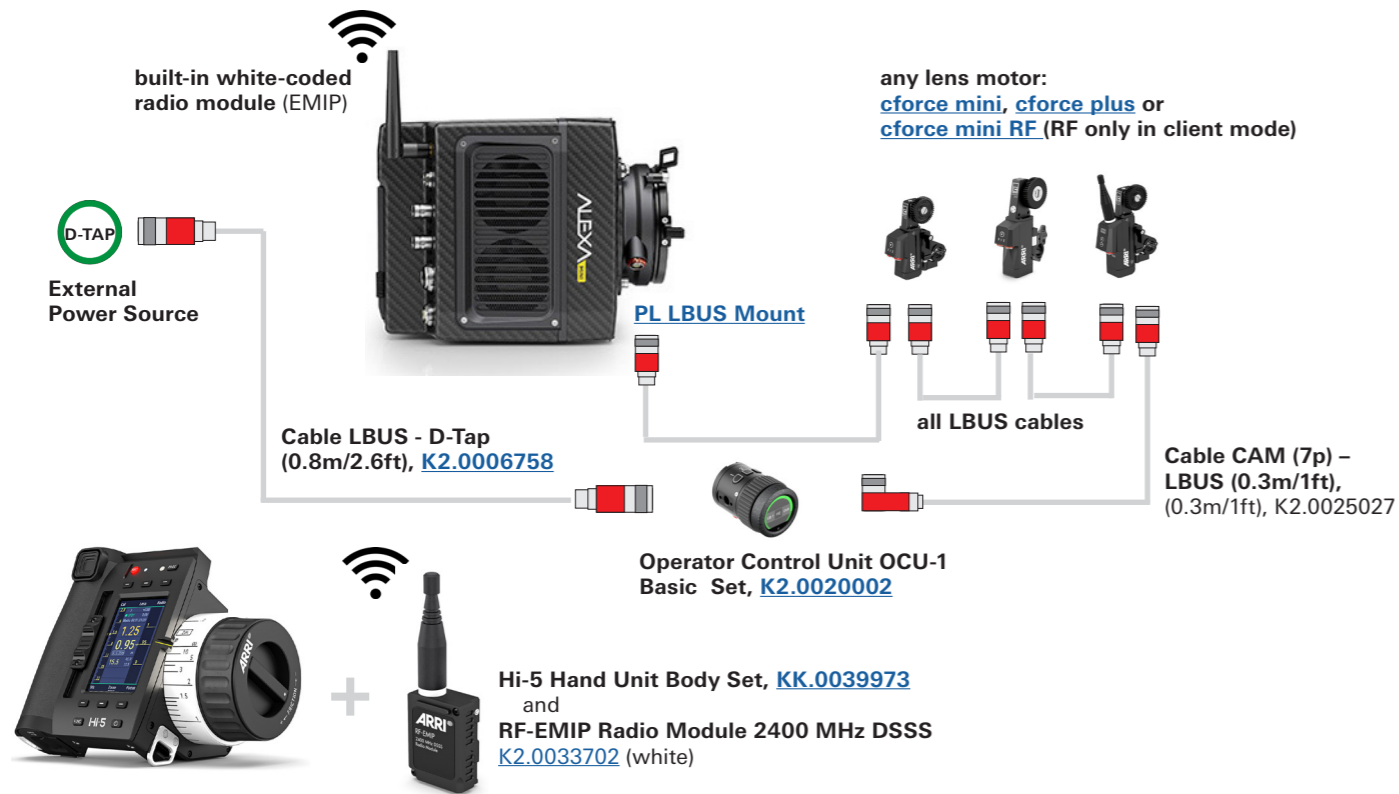

ALEXA Mini / ALEXA Mini LF



ALEXA Mini / ALEXA Mini LF with RIA-1



ALEXA Mini / ALEXA Mini LF with RIA-1 & UDM-1



* optional LBUS required to inject lens metadata from non LDS or /i lenses into the camera

When optional LBUS is connected:

- 1) In Hi-5 Lens Menu, set Data Source to Camera (not Controller)
- 2) Transfer lens file
- 3) Ensure correct settings of motor directions
- 4) Calibrate motors (camera and RIA-1 must be tuned on)